


**HUMBOLDT  
UTILITIES**

**INSTALLATION GUIDE  
OVERHEAD RESIDENTIAL  
SERVICE METERING**


DATE: 2/27/97

STANDARD  
NUMBER

M8-12R

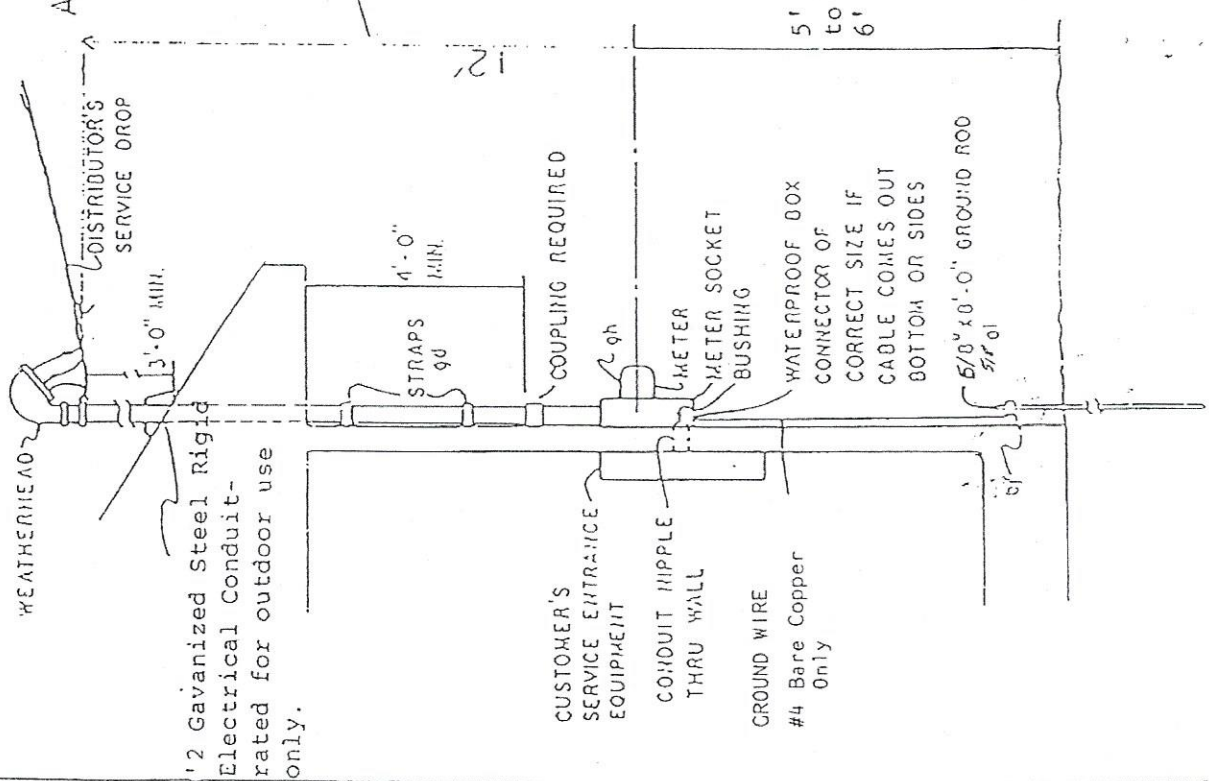


ATTACHMENT POINT

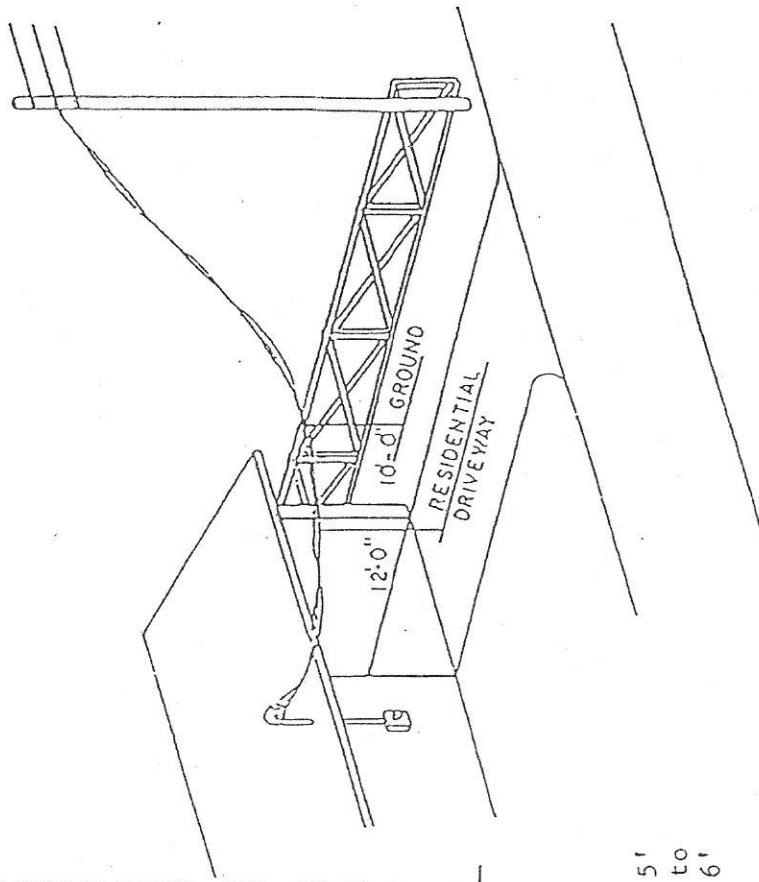

12

5'  
to  
6'

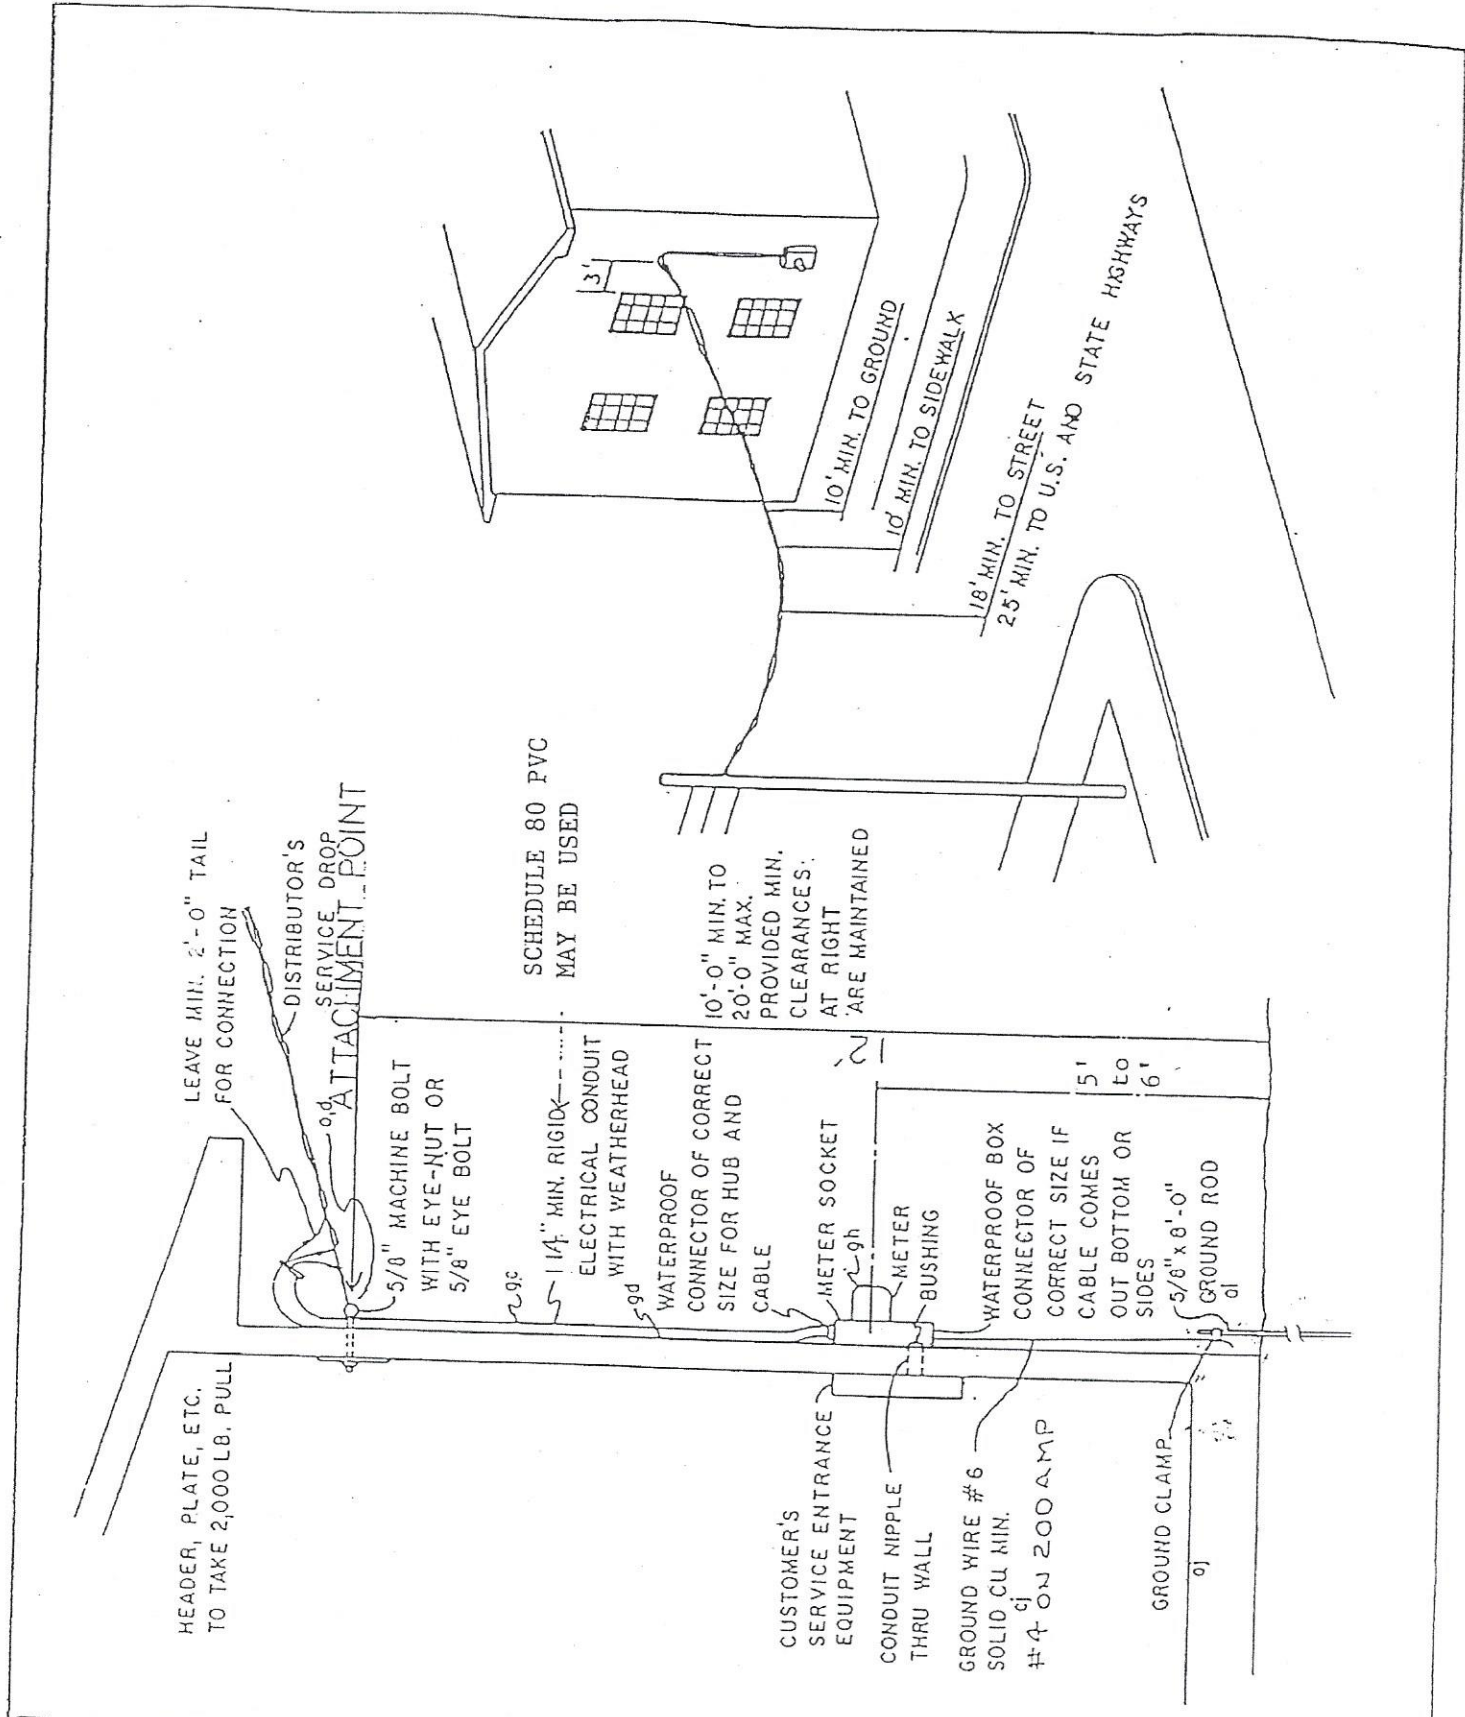

LEAVE MIN. 2'-0" TAIL FOR CONNECTION

DISTRIBUTOR'S SERVICE DROP ATTACHMENT POINT

5/8" MACHINE BOLT WITH EYE-NUT OR 5/8" EYE BOLT

SCHEDULE 80 PVC MAY BE USED

1 1/4" MIN. RIGID ELECTRICAL CONDUIT WITH WEATHERHEAD

WATERPROOF CONNECTOR OF CORRECT SIZE FOR HUB AND CABLE

10'-0" MIN. TO 20'-0" MAX. PROVIDED MIN. CLEARANCES AT RIGHT ARE MAINTAINED

CUSTOMER'S SERVICE ENTRANCE EQUIPMENT

CONDUIT NIPPLE THRU WALL

GROUND WIRE #6 SOLID CU MIN. #4 ON 200 AMP

GROUND CLAMP

METER SOCKET

METER BUSHING

WATERPROOF BOX CORRECT SIZE IF CABLE COMES OUT BOTTOM OR SIDES

5/8" x 8'-0" GROUND ROD

9c

9d

9e

9f

9g

9h

9i

9j

9k

9l

9m

9n

9o

9p

9q

9r

9s

9t

9u

9v

9w

9x

9y

9z

9aa

9ab

9ac

9ad

9ae

9af

9ag

9ah

9ai

9aj

9ak

9al

9am

9an

9ao

9ap

9aq

9ar

9as

9at

9au

9av

9aw

9ax

9ay

9az

9ba

9bb

9bc

9bd

9be

9bf

9bg

9bh

9bi

9bj

9bk

9bl

9bm

9bn

9bo

9bp

9bq

9br

9bs

9bt

9bu

9bv

9bw

9bx

9by

9bz

9ca

9cb

9cc

9cd

9ce

9cf

9cg

9ch

9ci

9cj

9ck

9cl

9cm

9cn

9co

9cp

9cq

9cr

9cs

9ct

9cu

9cv

9cw

9cx

9cy

9cz

9da

9db

9dc

9dd

9de

9df

9dg

9dh

9di

9dj

9dk

9dl

9dm

9dn

9do

9dp

9dq

9dr

9ds

9dt

9du

9dv

9dw

9dx

9dy

9dz

9ea

9eb

9ec

9ed

9ee

9ef

9eg

9eh

9ei

9ej

9ek

9el

9em

9en

9eo

9ep

9eq

9er

9es

9et

9eu

9ev

9ew

9ex

9ey

9ez

9fa

9fb

9fc

9fd

9fe

9ff

9fg

9fh

9fi

9fj

9fk

9fl

9fm

9fn

9fo

9fp

9fq

9fr

9fs

9ft

9fu

9fv

9fw

9fx

9fy

9fz

9ga

9gb

9gc

9gd

9ge

9gf

9gg

9gh

9gi

9gj

9gk

9gl

9gm

9gn

9go

9gp

9gq

9gr

9gs

9gt

9gu

9gv

9gw

9gx

9gy

9gz

9ha

9hb

9hc

9hd

9he

9hf

9hg

9hh

9hi

9hj

9hk

9hl

9hm

9hn

9ho

9hp

9hq

9hr

9hs

9ht

9hu

9hv

9hw

9hx

9hy

9hz

9ia

9ib

9ic

9id

9ie

9if

9ig

9ih

9ii

9ij

9ik

9il

9im

9in

9io

9ip

9iq

9ir

9is

9it

9iu

9iv

9iw

9ix

9iy

9iz

9ja

9jb

9jc

9jd

9je

9jf

9jg

9jh

9ji

9jj

9jk

9jl

9jm

9jn

9jo

9jp

9jq

9jr

9js

9jt

9ju

9jv

9jw

9jx</